




202210 Mains/ Battery Powered

Horse Fence Kit Setup Instructions

Your Horse Fence kit includes the following items:-

- 20x 120cm Green Plastic Posts.
- 200m of 6mm White Polyrope.
- 15x 6mm Polyrope Joiners.
- 1x Dual Powered Fence Energiser.
- 1x Energiser Stand.
- 1x 25m Lead Out Cable.
- 1x 5m Energiser to Ground Lead.
- 1x 1m Grounding Rod.
- 1x Warning Sign.
- 1x Multi Lamp Fence Tester.
- 2x Gate Handles.
- 1x Rope to Rope Lead.
- 8x Double Loop Anchors.

Plastic posts are usually spaced at approximately 4 metres apart.

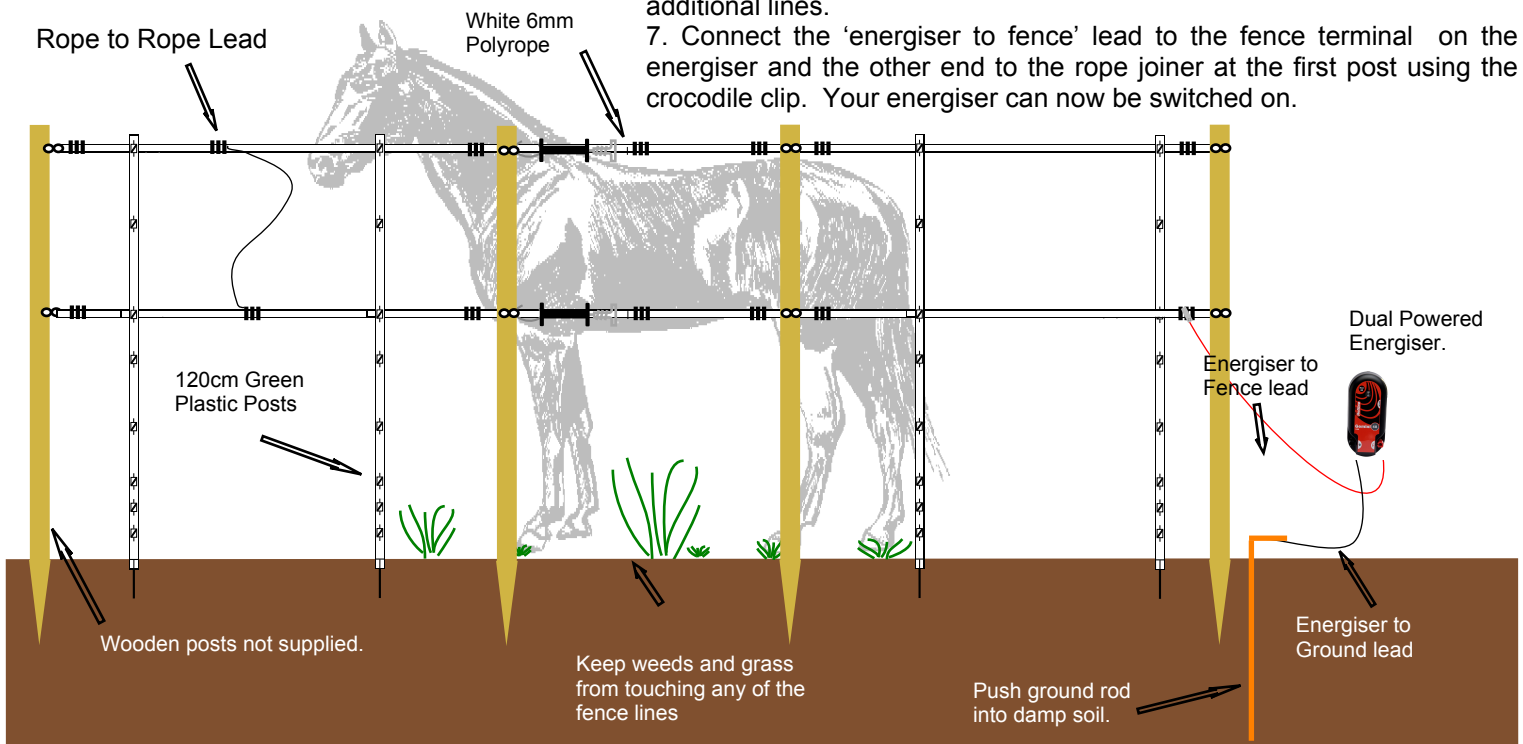

1. Fix your fence energiser to a post or wall or use the stand supplied. Leave switched off until your fence is erected. If using the mains to power the energiser we recommend mounting the energiser undercover or in a building within 25m of your fence. This kit is supplied with a 25m lead out cable which takes the high voltage pulse from the energiser to your fence.
2. Push the grounding rod into the ground near to the energiser leaving enough above ground to connect the earth lead. Attach one end of the earth lead to the screw on the earth rod and the other end to the earth terminal on the energiser.
3. Push the plastic posts into the ground approx. 4 metres apart. For use at the start, end and corners the kit includes double loop anchors that can be screwed into existing wooden fencing or new wooden posts that are not included in the kit and will have to be purchased locally.
4. Take one end of the polyrope and feed it through one of the two rope joiners, then through the chosen support on the first post and back through the rope joiner to make a secure termination.
5. Place the rope in the corresponding supports on each of the posts of your fence. When you reach either a wooden gate post or end post (neither supplied) terminate the rope run by screwing a double loop anchor insulator into the post and looping the rope back on itself using a rope joiner. Repeat this procedure for additional horizontal lines. Now cut the rope as necessary.
6. If you need an access gate two gate handles are supplied and loop anchors to screw into the gate posts. Firstly screw the double loop anchors into the gate posts at the desired height connect the rope to one of the anchors and then measure how much rope you will need to go across the gateway allowing for the rope to be doubled back to fit the gate handle. Cut the rope and fit the gate handle to the rope using a rope joiner. Ensure that the handle now hooks into the Double Loop Anchor on the second gate post giving slight tension to the rope line. Repeat this procedure for additional lines.
7. Connect the 'energiser to fence' lead to the fence terminal on the energiser and the other end to the rope joiner at the first post using the crocodile clip. Your energiser can now be switched on.

For extra posts order part no.15695GN (box of 20)
For extra polyrope order part no. 153372 (200m roll)



to order online visit
www.countrystoredirect.com
or call 01233 820368