




207150
Short Post

Badger Barrier Gateway Kit Setup Instructions

Your Short Post Badger Barrier Gateway Kit includes the following items:-

- 2x 800mm x 50mm Wooden Posts.
- 1x 100m of Green Polycord.
- 8x Gate Anchor Insulators.
- 20x Polycord Joiners.
- 4x Gate Handles.
- 1x Warning Sign.

1. This kit is designed to add an access point to a Short Post Badger Barrier fence. It can be added to an end of a fence or at a mid point.
2. If retro-fitting the Gateway Kit switch your fence energiser off before starting work on the fence.
3. Drive the two wooden posts into the ground each side of where you wish the gateway to be. If retro fitting the gateway cut the existing line at the mid point of your gateway this will leave plenty of polycord to tie onto the double-loop anchor insulators.
4. Screw the eight double-loop anchor insulators into the two wooden posts at the level of your fence lines.
5. Use the cord provided, the cord joiners and the gate handles to create the horizontal gateway lines. The gate handles have an integral spring so that the gateway lines can be closed and still maintain horizontal tension, use the cord joiners to adjust the line lengths appropriately.
6. Now connect the existing fence lines to the double-loop anchors on the outside of the gate posts using more of the polycord joiners. Remember to keep all the horizontal lines of your fence and gate adequately taught so as not to sag and prevent vegetation from making contact with the fence.
7. Using the remaining four polycord joiners and a length of polycord connect all the horizontal lines together this will ensure that a voltage is maintained on all fence lines.
8. Once you have switched your fence energiser back on use a fence tester to make sure that all parts of your fence and gate have a live pulse.

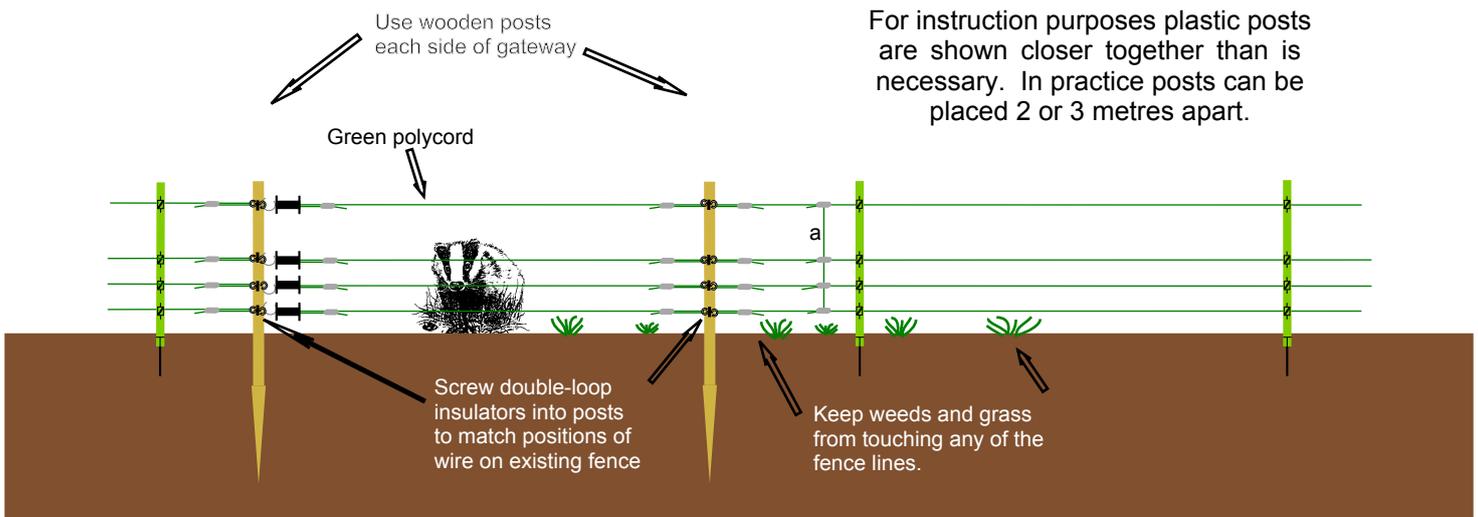

to order online visit
www.countrystoredirect.com
or call 01233 820368